 


INDOOR DIGITAL TIMER

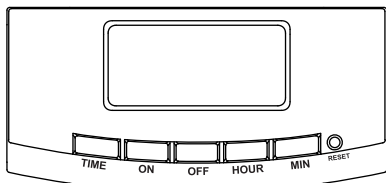

Front

Safety Information

Federal Communications Commission Interference Statement
This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

WARNING: RISK OF ELECTRIC SHOCK. Use this product only in dry, indoor locations.

 
RATINGS

125 VAC, 60 Hz, 15 A General Purpose
125 VAC, 60 Hz, 15 A Resistive
1000 W Tungsten
500 W Electronic Ballast
120 VAC, 60Hz, 8.3 A Standard Ballast
1/3 HP Motor Load

Product Description

NOTE: The timer has one time program & daily repeat

1. **TIME:** The TIME button will set the clock.
2. **ON:** The ON button will set the ON time of event.
3. **OFF:** The OFF button will set the OFF time of event.
4. **HOUR:** The HOUR button will set the hour for the timer.
5. **MIN:** The MIN button will set the minute for the timer.
6. **RESET:** The RESET button will reset all functions.
7. **SIDE SWITCH:** The side switch is used to set the timer function: Always ON or Timer Control.
8. **Outlet:** The single outlet located on the side of the timer is used to plug-in the devices that will be controlled by the timer.

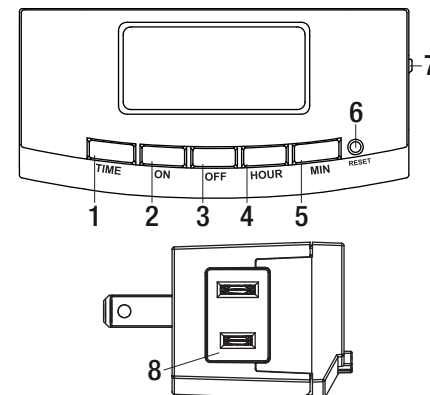

Operating Instructions

1 Preparing the timer for use

NOTE: Before initial use, plug the timer in for at least 30 minutes to charge the internal battery. After the screen displays, the unit is ready for programming.

- When using the timer for the first time, please push the RESET button (6) to clear all the settings.

NOTE: Only the "PM" icon will display in the bottom right portion of the screen; during the "AM" time frame, no icon will be displayed.



Operating Instructions (continued)

2 Setting the clock

- The colon will flash when the time is set and working.
- Press and hold the TIME button (1), and then press the HOUR button (4) to set the current hour.
- Press and hold the TIME button (1), and then press the MIN button (5) to set the current minutes.
- The timer will display the current time when the TIME button (1) is released.



3 Setting the ON time

- Press and hold the ON button (2), and then press the HOUR button (4) to set the hour of the time for which the timer will control the devices plugged into the unit.
- Hold the ON button (2), and then press the MIN button (5) to set the minute of the time for which the timer will control the devices plugged into the unit.



Operating Instructions (continued)

4 Setting the OFF time

- Press and hold the OFF button (3), and then press the HOUR button (4) to set the hour of the time for which the timer will stop controlling the devices plugged into the unit.
- Hold the OFF button (3), and then press the MIN button (5) to set the minute of the time for which the timer will stop controlling the devices plugged into the unit.

 


NOTE: Once you have finished setting the ON and OFF times for the timer, the screen will display the current time.

NOTE: Press the ON or OFF button (2 or 3) to check the programmed ON or OFF times.

5 Using the side switch

- When you set the side switch (7) to the "Always ON" position, the power will stay on regardless of the previous timer settings.
- When you set the side switch (7) to the "Timer Control" position, the timer will control the plugged-in devices according to the times previously programmed.



Troubleshooting

Problem	Solution
The devices plugged into the timer do not turn on, even when the timer is in the "Always ON" position.	Be sure that the devices are functional by plugging them directly into the outlet. Be sure that the devices are in the "ON" position if they have their own switch. Be sure that the outlet that the timer is plugged into is active.
The devices plugged into the timer do not turn ON or OFF at the programmed times.	Confirm the timer program and/or reset the timer by inserting an object, such as a paper clip, into the reset hole.

Back